


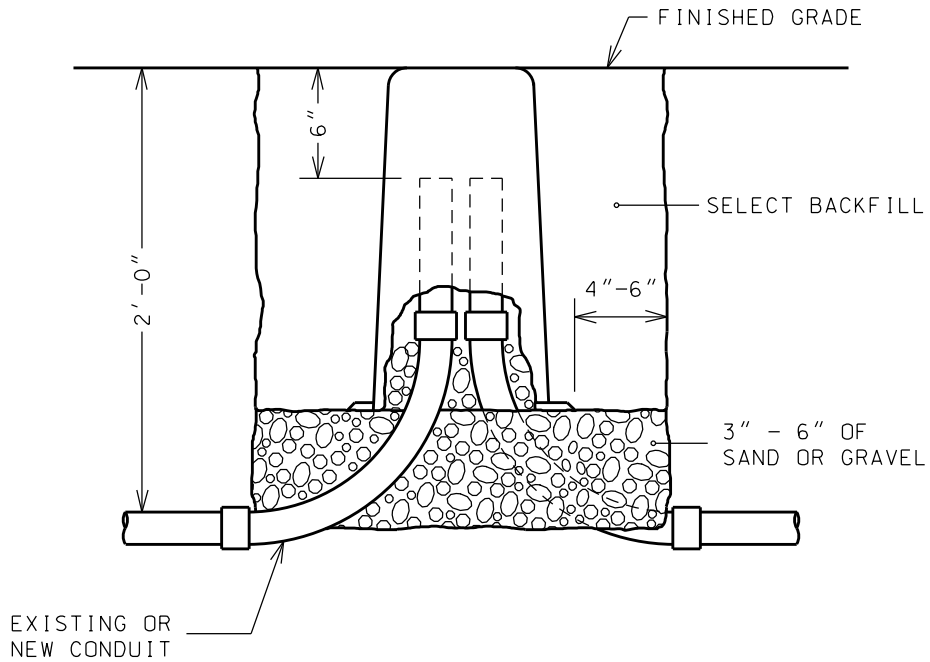

NOTES:

1. PLACE 3 TO 6 INCHES OF SAND OR GRAVEL IN BOTTOM OF EXCAVATION.
2. IF NECESSARY, USE CONDUIT EXTENSION AND COUPLING TO EXTEND EXISTING CONDUIT TO FINISHED GRADE.
3. PULLBOX WILL BE AS PROVIDED BY THE CITY.
4. PULLBOX WITH CONCRETE RING AND STEEL COVER WILL BE USED FOR INSTALLATION IN PAVED AREAS.

CITY OF ROCHESTER

FIBERGLASS PULLBOX INSTALLATION

ISSUED 9-2-91

REVISED 4-28-06

STD. DWG.

NO. R671-4