



## SECTION A-A

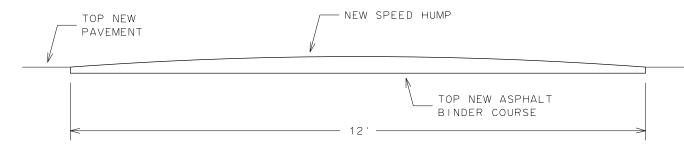

## SECTION B-B

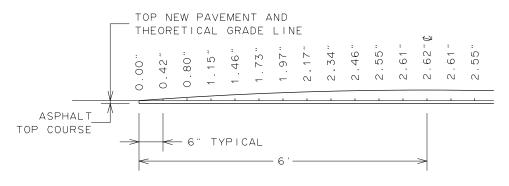

CROSS-SECTION

## NOTES:

- 1. SPEED HUMP CONSISTS OF HMA COURSES APPLIED DIRECTLY TO TOP OF ASPHALT BINDER COURSE AT DEPTHS SPECIFIED.
- 2. DEPTHS SPECIFIED FOR FORMING PARABOLIC SHAPE OF SPEED HUMP ARE AS MEASURED FROM THEORECTICAL GRADE LINE TO TOP OF SPEED HUMP.
- 3. FINISH PAVING STREET WITH ASPHALT TOP COURSE UP TO OUTER LIMITS OF SPEED HUMP, LEAVING AREA FOR SPEED HUMP OPEN.
- 4. CLEAN PAVEMENT SURFACE, APPLY TACK COAT AND TREAT ALL EDGES WITH ASPHALT PAVEMENT JOINT ADHESIVE BEFORE CONSTRUCTING SPEED HUMP.

## SPEED HUMP SECTIONS NEW PAVEMENT ISSUED 1-5-98 NON-STANDARD REVISED 3-1-17 DWG.NO.S413-2