


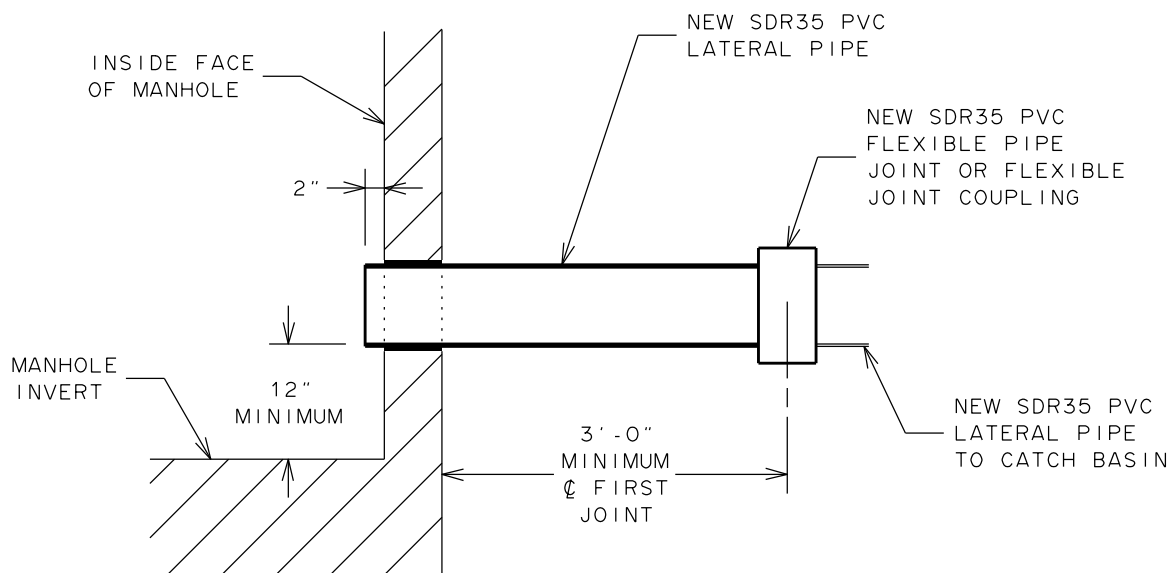

NOTES:

1. CORE NEW OPENING IN MANHOLE WALL LARGE ENOUGH TO ACCOMMODATE NEW LATERAL CONNECTION.
2. CLEAN OPENING ALL AROUND, REMOVING ALL LOOSE MATERIALS.
3. INSERT NEW LATERAL THRU MANHOLE OPENING AND MAKE CONNECTION WATERTIGHT. SEAL ANY VOID BETWEEN OPENING AND LATERAL CONNECTION WITH EPOXY MORTAR, SIKADUR 33 OR FLEXOLITH GEL.

CITY OF ROCHESTER

LATERAL CONNECTION TO SEWER MANHOLE - NEW OPENING

ISSUED 4-5-06

REVISED 7-31-12

NON-STANDARD
DWG.NO.S60I-12