


SECTION AT CURB

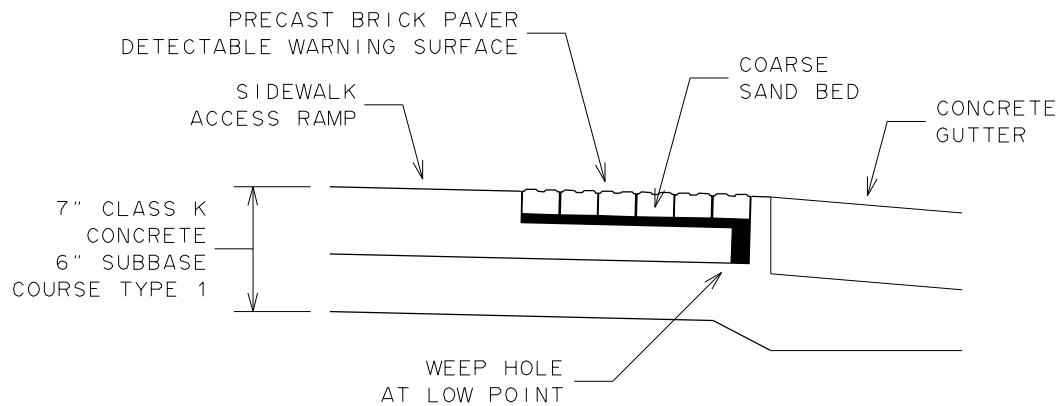

SECTION AT CONCRETE GUTTER

NOTES:

1. SET PRECAST BRICK PAVERS HAND TIGHT ON MINIMUM 1 INCH THICK THOROUGHLY COMPACTED COARSE SAND BEDDING MATERIAL. SURFACE OF BEDDING MATERIAL TO BE UNIFORMLY EVEN, MOIST BUT NOT SATURATED.
2. FILL JOINTS BETWEEN PRECAST BRICK PAVERS WITH POLYMERIC JOINT SAND.
3. AT LOW POINT, PROVIDE 2 INCH DIAMETER WEEP HOLE THRU CONCRETE FOUNDATION AND INTO SUBBASE COURSE MATERIAL, BY EITHER CORING HOLE THRU CONCRETE, OR INSTALLING 2 INCH DIAMETER SCHEDULE 40 PVC DRAIN PIPE. FILL WEEP HOLE WITH COARSE SAND BEDDING MATERIAL.

CITY OF ROCHESTER

PRECAST BRICK  
PAVER DETECTABLE  
WARNING SURFACE  
INSTALLATION

ISSUED 1-23-03

REVISED 7-1-17

NON-STANDARD

DWG.NO.S608-29