


CURB OPENING

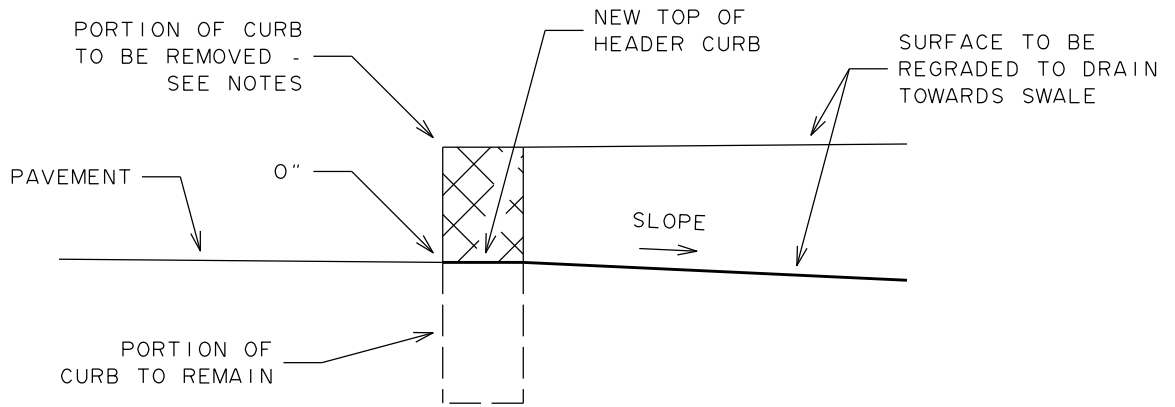

RESHAPE CURB

NOTES :

1. OPENING MAY BE CREATED DURING INSTALLATION OF NEW CURB, OR BY RESHAPING CURB.
2. HEADER CURB IS TO BE FLUSH WITH PAVEMENT SURFACE.
3. TOP FRONT EDGE OF CURB IS NOT TO BE ROUNDED.
4. TACK COAT UNEXPOSED SURFACE OF CURB.
5. RESHAPE TOP OF CURB BY SAW CUTTING HORIZONTALLY WITH POWER SAW. SAW CUT FULL WIDTH OF CURB, ALONG NEAT STRAIGHT LINES.
6. TOP OF CURB IS TO BE SAW CUT EITHER FLAT ACROSS, OR ON 1:12 SLOPE AWAY FROM PAVEMENT EDGE.
7. TOP OF CURB IS TO BE MILLED OR GROUND FINISHED TO SMOOTH SURFACE FREE FROM BURRS, NICKS OR OTHER MARKINGS OR DAMAGE FROM SAW CUTTING OPERATION.
8. CURB JOINTS ARE TO BE RE-POINTED WITH MASONRY MORTAR MIX.

CITY OF ROCHESTER		
SLOTTED STONE CURB		
ISSUED	12-1-15	NON-STANDARD DWG.NO.S609-23
REVISED		